

# PROENGIN SAS - AP4C



## GENERAL DESCRIPTION:

The handheld chemical detector AP4C is able to detect an extended range of chemicals. All dangerous compounds containing Sulphur, Phosphorus, Arsenic, and/or the HNO chemical liaison can be detected. AP4C has been designed for use on the field to detect Chemical Warfare Agents and/or TICs. AP4C has the capacity to work in very severe environmental conditions and the measurements are unaffected by high humidity levels or presence of other organic chemical compounds. The AP4C technology allows the simultaneous detection of an unlimited number of gases.



The response time is among the shortest on the market but what makes the AP4C unique is the recovery time after a positive detection. Where other detectors may take minutes or hours after a positive detection, AP4C will be ready after seconds.

## TECHNICAL DESCRIPTION:

AP4C detection is based upon Flame Photometry Detection (FPD), detection of the physical signature of the chemical atoms and bonds within the products and compounds.

AP4C burns all gas and particles providing energy to the electrons; that energy is emitted as photons. AP4C immediately analyses the photons, looking for Phosphorus, Sulfur, Arsenic or HNO signatures. This technology is sensitive, reliable, and resistant to humidity and temperature. AP4C requires no service and nearly no maintenance. It is able to be operational less than 3 minutes after a positive detection, following NATO requirements. Since FPD is not based on any database but relies upon signature detection, each AP4C is able to detect and measure concentration for the full list of agents.

## Tier Selection

Final tier assignment is based on overall product score.

- Top Tier
- Second Tier
- Third Tier
- Fourth Tier
- Bottom Tier

### RANKINGS

|                              | Biological | Chemical   | Radiological |
|------------------------------|------------|--|--------------|
| <b>FIELD USE System</b>      | N/A        | <span style="color: green; font-size: 2em;">●</span>   | N/A          |
| <b>MOBILE Laboratory</b>     | N/A        | <span style="color: green; border: 1px solid green; border-radius: 50%; width: 2em; height: 2em; display: inline-block; vertical-align: middle;"></span> | N/A          |
| <b>DIAGNOSTIC Laboratory</b> | N/A        | <span style="border: 1px solid gray; border-radius: 50%; width: 2em; height: 2em; display: inline-block; vertical-align: middle;"></span>                | N/A          |
| <b>ANALYTICAL Laboratory</b> | N/A        | <span style="border: 1px solid gray; border-radius: 50%; width: 2em; height: 2em; display: inline-block; vertical-align: middle;"></span>                | N/A          |

## CONTACT INFORMATION

PROENGIN SAS  
 1 rue de l'Industrie, 78210 Saint Cyr L'Ecole, France  
 POC: Mr Eric Damiens, Marketing and sales director  
 +33 1 30 58 47 34  
 Contact@proengin.com

## COST


- €20,000/system
- N/A/analysis

## Survey Source

Vendor Supplied Information


## Scoring Analysis

System scores are compared across the four scenarios and ranked from highest to lowest.

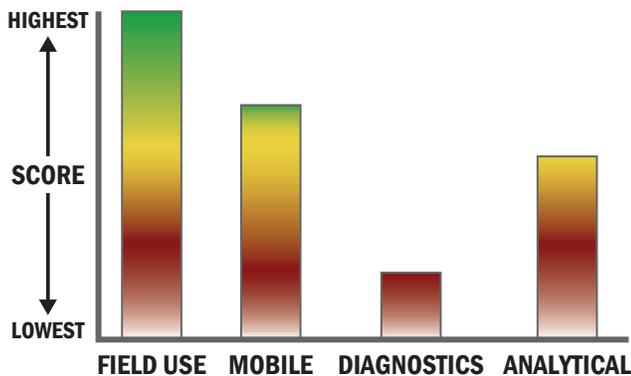

## Impact Chart

The Impact Chart is a spider graph representing specific categories and designed to give the reader a visual depiction of how a particular system is expected to operate across the four different scenarios. The score for each of the seven categories is presented as the percentage of the total possible score. Higher category scores extend the spokes of a graphic toward the outer edge of the chart. The area graphed for each of the four scenarios relates to how well the system performed in that scenario. Graphics for each of the four scenarios are super-imposed for ease of comparison.

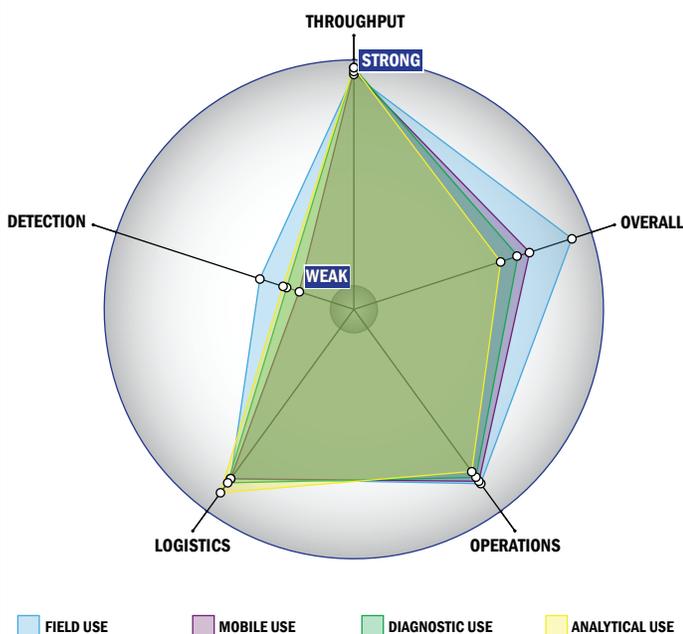


## Evaluation Criteria

### Throughput:

- Detection is instantaneous
- Continuous operation with no defined runs
- System is continuous and provides real time analysis with no defined tests/samples
- The system or device is currently fully automated
- Device or system is intended for multiple detection assays
- 0-1 solutions, buffer, eluents, and/or reagents
- 1 component
- Less than 5 minutes is required for setup
- Automatic detection

### Logistics:

- Very brief (minutes-hours) training and minimal technical skills
- Approximately the size of a toaster
- Between 1 and 5 kg
- Wireless and wired connections are available
- System or device uses batteries
- Battery life

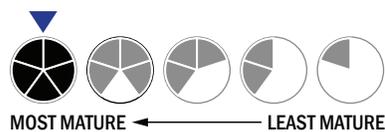

### Operations:

- Can be used from  $-21^{\circ}\text{C}$  to  $42^{\circ}\text{C}$  (All temperatures)
- This system does not require consumable components
- Performance is not influenced by relative humidity
- Greater than 10 years expected life
- Results can be viewed in real-time
- The system or device is currently fully autonomous
- The system software is closed and not available for modification
- The system hardware is closed and not available for modification

### Detection:

- Possible the system could receive 510K clearance, no current efforts at this time
- Possible the system could receive FDA approval, no current efforts at this time
- Less than 10  $\mu\text{L}$
- Superior specificity. System has a false alarm rate approaching zero ( $\sim 0\%$ )
- $> 1 \times 10^{-3} \text{ mg/m}^3$
- 1 ppb – 1 ppm